



Operator's Manual

TOURNAMENT ULTRA PLUS

7580
SN: T3531

August, 2010

Product Support: 1020 Hwy 224; Humboldt, KS 66748
1-888-422-5173 lj@smithco.com

TABLE OF CONTENTS

<u>TITLE</u>	<u>PAGE</u>
Introduction	
Introduction.....	1-2
Specifications.....	3
Symbols.....	4-5
Speed Boss.....	6
Safe Practices.....	7
Controls & Instruments.....	8
Steering Setup.....	9
Operation.....	10
Daily Checklist.....	11
Service	
Maintenance.....	12-15
Service Chart.....	16
End User's Service Chart.....	17
Storage.....	18

SMITHCO ULTRA - 4 TOURNAMENT ROLLER

The SMITHCO ULTRA - 4 TOURNAMENT ROLLER is a field developed tool designed to condition the surface of putting greens, lawn bowling greens, and grass tennis courts to a precise texture for tournament grade quality.

The ULTRA - 4 Roller utilizes two 8" rollers to achieve a "billiard table" surface. Both 8" rollers are driven and both are used for steering.

The TOURNAMENT ROLLER is built of the finest and heaviest material utilized on each part to insure longevity. The frame is fabricated out of seven gauge steel to provide weight to the machine and prevent warping. The steering has been especially engineered for operator comfort to alleviate fatigue during prolonged use. The specially designed, articulated steering rollers allow the rollers to follow the contour of the green to insure an even compaction over the entire surface.

Before placing the ULTRA - 4 Roller into service it must be serviced with fuel and the hydraulic fluid checked. Refer to the manuals furnished for the engine and transmission which will specify fuel and oils required.

Operator familiarization should be conducted before use of the ULTRA - 4 roller on the greens. Improper handling of the roller could cause damage to the turf. Do not allow the roller to stand idle on the putting surface for any length of time as the weight of the machine will cause indentions that will be difficult to smooth out. Place the roller into motion while off the green, and never attempt to turn the steering rollers sharply while the machine is on the green. Do not attempt to turn the steering wheel while the machine is not in motion.

Each Golf Course Superintendent should plan a pattern for the rolling of his greens so all greens would be compatible in speed and direction. Most Superintendents will probably decide that the best method of rolling would be back and fourth in an alternate direction. When possible, the roller should be run up and down major undulations, not across. Each Superintendent can decide as to which method is best for his greens.

The ULTRA - 4 roller should be lubricated frequently with any grade of machine oil at all moving joints, and the bearings that are furnished with grease fittings should be greased with any good grade Lithium or equivalent water repellent grease. The Hydraulic pump uses 10W30 or 10W40 nondetergent oil.

THE SMITHCO ULTRA - 4 TOURNAMENT ROLLER IS TO BE USED ON GOLF COURSE GREENS, LAWN BOWLING AREAS AND GRASS TENNIS COURTS ONLY. IT IS NOT TO BE USED ON ASPHALT, CEMENT, OR GRAVEL AREAS.

Good maintenance and regular servicing will insure that longevity of your SMITHCO ULTRA - 4 TOURNAMENT ROLLER. Support is readily available from your local distributor or SMITHCO.

INTRODUCTION

Thank you for purchasing a **SMITHCO** Tournament ULTRA - 4 Roller.

Carefully read this manual and the engine manual as they include safety, operating, assembly and maintenance instructions. Failure to do so could result in personal injury or equipment damage.

Keep manuals in a safe place after operator and maintenance personnel have read them. Right and left sides are from the operator's seat, facing forward.

All **SMITHCO** machines have a Serial Number and Model Number. Both numbers are needed when ordering parts. The serial number plate on the ULTRA - 4 Roller is located on the back of the unit.

For easy access, record your Serial and Model numbers here.

SMITHCO		DATE OF MFG.
WAYNE, PENNSYLVANIA 19087 USA 610-688-4009 FAX 610-688-6069		<input type="text"/>
SERIAL NO.	kw/hp	
<input type="text"/>	<input type="text"/>	
MODEL NO.	kg/lb	
<input type="text"/>	<input type="text"/>	

Information needed when ordering replacement parts:

1. Model Number of machine.
2. Serial Number of machine.
3. Name and Part Number of part.
4. Quantity of parts.

SPECIFICATIONS

TOURNAMENT ULTRA PLUS ROLLER SPECIFICATIONS

MODEL **7580**

Weights and Measurements

Length 52"
Width 49"
Height 47"
Ground Clearance 7"
Weight 900 lbs.

Ground Pressure

4.5 PSI

Brakes

Braking through hydraulic system

Seat

High back; one piece for operator comfort

Body

Welded steel frame; powder coated

Engine

Make: Vanguard Briggs & Stratton OHV gas engine

Model#: 303447

Type / Spec#: 1131E1

Horsepower: 16 hp (11.9 kW)

Fuel: Unleaded 87 Octane Gasoline Minimum

Cooling System: Air Cooled

Lubrication System: Full Pressure

Alternator: 16 amp

Sound Level

At Ear Level: 72 dB

Electrical System

12-volt electric start

Hydraulic Pump

Hydro gear system

Wheel Motor

(2) Hydro Gear HGM-10P-7182

Drive

Hydrostatic drive to (2) 8" rollers with both rollers driven

Steering

10.2 Reduction; 16" soft grip steering wheel with tilt; 10' diameter turning radius

Air Cleaner

Standard

Fuel Tank

5 gallon capacity

Oil Tank

5 gallons

Rollers

Two 8" steel powder coated rollers 36" long

Controls


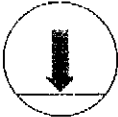









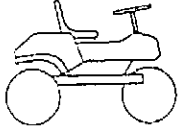







Foot operated with dual control cables.

Speed Control


Patented Speed Boss

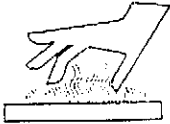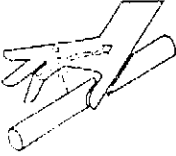Trailer 7505

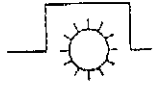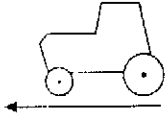SYMBOLS

	Up/Down Arrow		Down/Lower		Up/Raise
	No Smoking		Moving Parts		Manual Operation
	Pinch Point		Step		Hot Surface
	Hydraulic Fluid Penetration		Lift Arm		Tractor
	Engage		Disengage		PTO
	Ground Speed		Fast		Slow
H	High	L	Low	F	Forward
R	Reverse	N	Neutral		Warning Danger Caution

 SYMBOLS




Read
Operator's
Manual




Electrical Power



 No Electrical
Power




Engine - Stop

 


Engine - Start



 
Engine - Run




Engine Oil

 

Temperature
Light

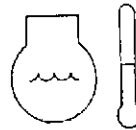

Water
Temperature

 

RPM



 
Gasoline



Diesel



Glow Plug - On




Glow Plug - Off




Glow Plug



 Hour Meter



Hour Meter

 

Fuse



Hand Throttle



 
Choke - Closed




Choke - Open



Park Brake



Park Brake
Release

 

Hydraulic Oil
Level


SPEED BOSS

ADJUSTING SPEED BOSS BRACKET

1. Loosen Ref. #1 $\frac{1}{4}$ " Bolt
2. Slide speed boss bracket Ref. #2 in or out to adjust speed.

NOTE: Moving the bracket in toward engine will increase roller speed.
Moving bracket out will decrease roller speed.

3. After speed has been adjusted tighten $\frac{1}{2}$ " bolt.

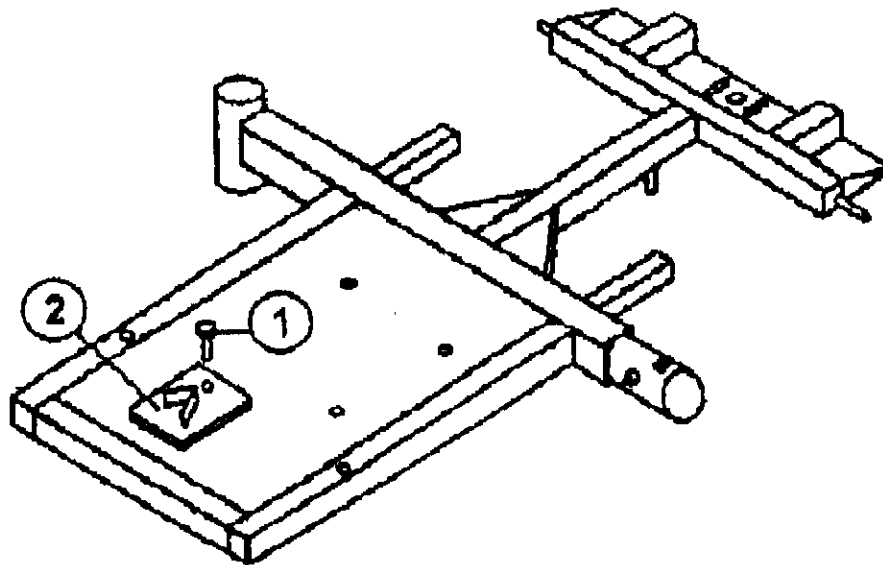

SAFE PRACTICES

1. **It is your responsibility to read this manual and all publications associated with this machine (engine and accessories).**
2. Never allow anyone to operate or service the machine or its accessories without proper training and instructions. Never allow minors to operate any equipment.
3. Learn the proper use of the machine, the locations and purpose of all the controls before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands and feet. Operate the machine only in daylight or in good artificial light.
5. Inspect the area where the equipment will be used. Pick up all debris you can find before operating. Beware of overhead obstructions and underground obstacles. Stay alert for hidden hazards.
6. Never operate equipment that is not in perfect working order or without decals, guards, shields, or other protective devices in place.
7. **Never disconnect or bypass any switch.**
8. Carbon monoxide in the exhaust fumes can be fatal when inhaled, never operate a machine without proper ventilation.
9. Fuel is highly flammable, handle with care.
10. Keep engine clean. Allow the engine to cool before storing and always remove the ignition key.
11. After engine has started machine must not move. If movement is evident, the neutral mechanism is not adjusted correctly. Shut engine off and readjust so the machine does not move when in neutral position.
12. Never use your hands to search for oil leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury.
13. This machine demands your attention. To prevent loss of control or tipping of the vehicle:
 - A. Make sure area is clear. Do not stop or start suddenly on any slope. Avoid driving sideways on hills as much as possible.
 - B. Reduce speed on slopes and in sharp turns. Use caution when changing directions on slopes.
 - C. Stay alert for holes in the terrain and other hidden hazards.
14. Before leaving operator's position for any reason:
 - A. Disengage all drives.
 - B. Shut engine off and remove the ignition key.
15. Keep hands, feet and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
16. Keep the area of operation clear of all bystanders.
17. Never carry passengers.
18. Stop engine before making repairs/adjustments or to check or add oil to the crankcase.
19. **Use parts and materials supplied by SMITHCO only. Do not modify any function or part.**

These machines are intended for professional maintenance on grass greens. Other use will void the warranty.

CONTROLS & INSTRUMENTS

IGNITION SWITCH

Located on right side of seat housing. This is a three-position ignition switch; Stop – Run – Start.

- A. **Choke:** Choke is located on the left side of the seat housing. Pull choke control knob out to close choke plate when starting a cold engine. A warm engine may not require “choking” to start.
- B. **Hand Throttle:** Hand throttle is located on left side of the seat housing.
- C. **Fuse & Fuse Holder:** 30 AMP fuse is used.

STEERING

Acquaint yourself with steering before operating machine. The automotive type steering wheel is connected to the roller assembly by a chain driven sprocket. This allows for quick turns and short turning radius.

SEAT ADJUSTMENT

Seat adjustment lever is located under front of seat on left side. It provides seat adjustment forward or backward for operator's comfort.

FOOT PEDALS


RIGHT FOOT PEDAL

The right foot pedal is used for going to the right. When the pedal is released the roller will come to a slow stop. To bring the roller to a sudden stop press on the left foot pedal a little to reverse rollers to bring unit to a stop.

LEFT FOOT PEDAL

The left foot pedal is used for going to the left. When the pedal is released the roller will come to a slow stop. To bring the roller to a sudden stop press on the right foot pedal a little to reverse rollers to bring unit to a stop.

STEERING SETUP

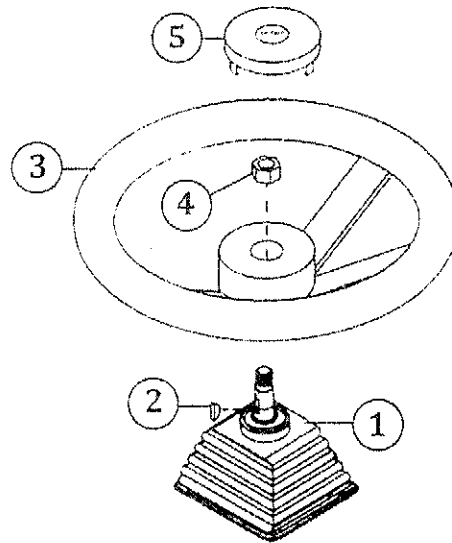


1. Tilt steering mechanism.
2. Place the key (Ref #2) into slot on steering shaft (Ref #1).
3. Install steering wheel (Ref #3) onto steering shaft (Ref #1).
4. Place nut (Ref #4) on steering (Ref #1) and tighten.
5. Install steering wheel cap (Ref #5).

OPERATION

STARTING ENGINE

Before operating this machine, become familiar with all controls and functions of these units. Also complete all maintenance requirements and read all safety warnings. By knowing the machine thoroughly, how it operates and by doing the prescribed maintenance steps, you can expect relatively trouble-free operation for years to come.

1. Make sure the fuel flow valve, located on the gas tank, is "ON"
2. The ignition switch is a three-position. Insert key (A) and turn clockwise until engine starts (C). Release key and it will return to run position (B). Use choke as necessary.
3. Allow engine to idle and warm up a few minutes.
4. To select a direction press down on the right or left foot pedal. Always come to a complete stop before going another direction.
5. To shut off engine, turn key to the stop position.

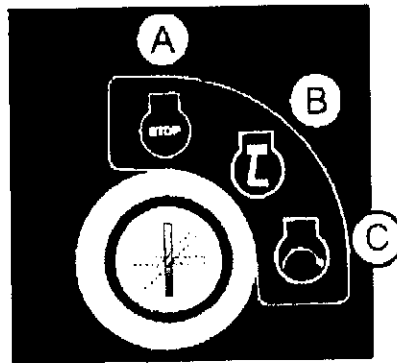

DAILY CHECKLIST

DAILY CHECKLIST

NOTE:

Use all procedures and parts prescribed by the manufacturers.
Read the engine manual before operation.

The suggested maintenance checklist is not offered as a replacement for the manufacturer's list, but as a supplement. You must adhere to guidelines established by manufacturer for warranty coverage. In adverse conditions such as dirt, mud or extreme temperatures, maintenance should be more frequent.

1. Check engine oil level. Add as needed. DO NOT OVERFILL.
2. Examine vehicle for damage or anything unusual to normal wear.
3. Inspect electrical system for loose connections or frayed wiring, including battery cables. Replace any faulty equipment or tighten if loose.
4. Check hardware for loose or missing nuts, bolts, set screws, etc., and tighten or replace as needed.
5. Listen for any noise, such as rattles due to loose hardware, scraping sounds, or unusual motor noises. Be sensitive to abnormal performance.
6. Inspect hydraulic lines for damage or leaks. Never use hands to inspect leaks.
7. Inspect all lubrication areas around pedal shafts, chassis parts, etc.
8. Inspect steering.
9. Assure that all switches are operating normally.
10. Check hydraulic oil. To replenish, use 10W-40 or 10W-30 Motor Oil API Service SG.
11. Check controls for smooth, proper working operation. Lubricate as needed.
12. Wash accumulated dirt **daily** from motor compartment and under body.

MAINTENANCE



Before servicing or making adjustments to machine, stop engine and remove key from ignition.

NOTE:

Use all procedures and parts prescribed by the manufactures. Read the engine manual.

AIR CLEANER ON ENGINE

1. Remove the thumbscrews on top of the cover and remove the cover.
2. Carefully remove paper element to prevent debris from entering carburetor. To service, clean by tapping gently on flat surface. Do not oil paper element. Replace if very dirty or damaged.

NOTE:

Do not use petroleum solvents, e.g., kerosene, which will cause cartridge to deteriorate. Do not use pressurized air to clean cartridge. Pressurized air can damage cartridge.


3. Reinstall paper element.
4. Replace cover and reattach thumb screws.

MAINTENANCE

ENGINE

Change and add oil according to chart below. Do not overfill. Use a high quality detergent oil. Use no special additives with recommended oils. Do not mix oil with gasoline.

SAE VISCOSITY GRADES

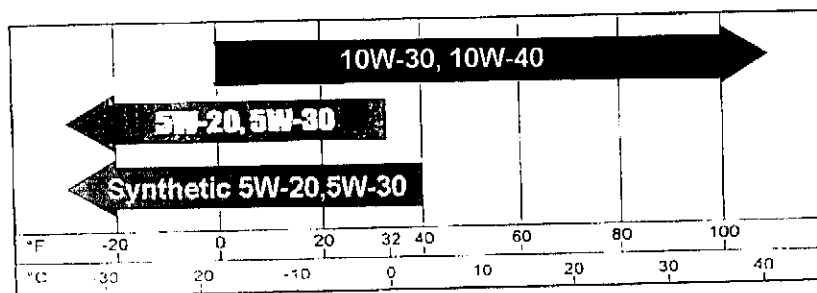

Starting Temperature Range Anticipated Before Next Oil Change

NOTE: Use of multi-viscosity oils (10W-40, etc.) will result in increased oil consumption. Check oil level more frequently if using these types of oils.

MAINTENANCE

BATTERY

Batteries normally produce explosive gases which can cause personal injury. Do not allow flames, sparks or any ignited object to come near the battery. When charging or working near battery, always shield your eyes and always provide proper ventilation.

Battery cable should be disconnected before using "Fast Charge".

Charge battery at 15 amps for 10 minutes or 7 amps for 30 minutes. Do not exceed the recommended charging rate. If electrolyte starts boiling over, decrease charging.

Always remove grounded (-) battery clamp first and replace it last. Avoid hazards by:

1. Filling batteries in well-ventilated areas.
2. Wear eye protection and rubber gloves.
3. Avoid breathing fumes when electrolyte is added.
4. Avoid spilling or dripping electrolyte.



Battery Electrolyte is an acidic solution and should be handled with care. If electrolyte is splashed on any part of your body, flush all contact areas immediately with liberal amounts of water. Get medical attention immediately.

MAINTENANCE

JUMP STARTING




Use of booster battery and jumper cables: Particular care should be used when connecting a booster battery. Use proper polarity in order to prevent sparks.

To jump start (negative grounded battery):

1. Shield eyes.
2. Connect ends of one cable to positive (+) terminals of each battery, first (A) then (B).
3. Connect one end of other cable to negative (-) terminal of "good" battery (C).
4. Connect other end of cable (D) to engine block on unit being started (NOT to negative (-) terminal of battery)

To prevent damage to other electrical components on unit being started, make certain that engine is at idle speed before disconnecting jumper cables.

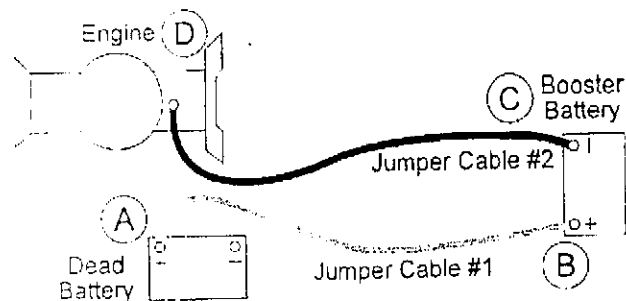

SERVICE CHART



Before servicing or making adjustments to the machine, stop engine, set park brake, block wheels and remove key from ignition.

NOTE:

Follow all procedures and ONLY use parts prescribed by the manufacturer. Read the engine manual before maintenance.

	Daily	As Required	100 Hours	200 Hours	250 Hours	300 Hours	400 Hours	Every 500 Hours/Yearly
§ Engine Oil	C		R	R		R	R	R
Engine for Leaks and Loose Parts	C		C	C		C	C	C
□ Air Cleaner (Paper Element)		C	C	C		C	C	R
= Spark Plugs		R		C			C	R
Idle Speed					C			C
Belts	C				C			C
* Tire Pressure	C		C	C		C	C	C
Fuel Level	C	C						
Fuel Filter		R						R
Battery Electrolyte Level			C	C		C	C	C
Clean Battery Terminals					C			C
= Torque Lug Nuts				C			C	C
Lubricate			C	C		C	C	C

C = Check or Clean at specified intervals

R = Replace at specified intervals

= Torque tire nuts after the first 10 hours and every 200 hours there after (64 to 74 ft/lb (87-100 NM)

§ Change oil and filter after first 5 hours.

= Gap .03 (.76 mm) Torque to 18-22 ft/lb (24-30 Nm)

□ Clean more often under dusty conditions or when airborne debris is present, replace air cleaner parts, if very dirty.

The suggested maintenance checklist is not offered as a replacement for the manufacturer's engine manual but as a supplement. You must adhere to the guidelines established by the manufacturer for warranty coverage. In adverse conditions such as dirt, mud or extreme temperatures, maintenance should be more frequent.

END USER'S SERVICE CHART

	Daily	As Required	100 Hours	200 Hours	250 Hours	300 Hours	400 Hours	Every 500 Hours/Yearly
§ Engine Oil								
Engine for Leaks and Loose Parts								
□ Air Cleaner (Paper Element)								
== Spark Plugs								
Idle Speed								
Belts								
* Tire Pressure								
Fuel Level								
Fuel Filter								
Battery Electrolyte Level								
Clean Battery Terminals								
=Torque Lug Nuts								
Lubricate								

C = Check or Clean at specified intervals

R = Replace at specified intervals

= Torque tire nuts after the first 10 hours and every 200 hours there after (64 to 74 ft/lb (87-100 NM)

§ Change oil and filter after first 5 hours.

== Gap .03 (.76 mm) Torque to 18-22 ft/lb (24-30 Nm)

□ Clean more often under dusty conditions or when airborne debris is present, replace air cleaner parts, if very dirty.


STORAGE


When storing, remove the key from the key switch to avoid unauthorized persons from operating machine.

1. Before storing, clean machine thoroughly.
2. Check bolts and nuts, tighten as necessary.
3. Make all repairs that are needed and remove any debris.
4. Remove the battery, adjust the electrolyte level and recharge it. Store the battery in a dry, dark place.
5. Store in a clean and dry area, but NOT near a stove, furnace or water heater which uses a pilot light or any device that can create a spark.
6. Engines stored over 30 days need to be protected or drained of fuel to prevent gum from forming in a fuel system or on essential carburetor parts. Check the engine manual and follow the instructions for the storage of the engine.

DECLARATION OF CONFORMITY • ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ • PROHLÁŠENÍ O SHODĚ • OVERENSSTEMMELSESERKLÆRING • CONFORMITEITSVERKLARING • VASTAVUSDEKLARATSIOON • VAATIMUSTENMUKAISUUSVAKUUTUS • DECLARATION DE CONFORMITÉ • KONFORMITÄTSEKTLÄRUNG • ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΟΣΗΣ • MEGFELELŐSÉGI NYILATKOZAT • DICHIARAZIONE DI CONFORMITÀ • ATBILSTĪBAS DEKLARĀCIJA • ATITIKTIKTES DEKLARACIJA • DIKJARAZZJONI TAL-KONFORMITÀ • DEKLARACIJA ZGODNOSTI • DECLARAÇÃO DE CONFORMIDADE • DECLARAȚIE DE CONFORMITATE • VYHLÁSENIE O ZHODE • IZJAVA O SKLADNOSTI • DECLARACIÓN DE CONFORMIDAD • DEKLARATION OM ÖVERENSSTÄMMELSE

<p>Business name and full address of the manufacturer: Το πρόσωπο ή οι ημετέροι εργοδότες ή ο αποκλειστικός αντιπρόσωπος της εταιρείας ή ο κάτοχος της επιχείρησης. Το πρόσωπο ή οι ημετέροι εργοδότες ή ο αποκλειστικός αντιπρόσωπος της εταιρείας ή ο κάτοχος της επιχείρησης. Το πρόσωπο ή οι ημετέροι εργοδότες ή ο αποκλειστικός αντιπρόσωπος της εταιρείας ή ο κάτοχος της επιχείρησης.</p>	<p>Smiffco Inc 34 West Avenue Wayne, PA USA 19087-3311</p>
<p>Product Code • Код на продукта • Код výrobku • Produktkód • Productcode • Tuotekoodi • Code produit • Code produit • Produktcode • Көбікөс нөмүрү • Төрөлмөкөд • Code produit • Produktcode • Produktkód • Kódi tal-Prodott • Kod produktu • Código de Produto</p>	<p align="center">7580</p>
<p>Machine Name • Наименование на машината • Назвє stroja • Maskinavn • Mäskintennamn • Masina nime • Laiteen nimi • Nom de la machine • Mäschinänbezeichnung • Συνοπτική περιγραφή • Gepröv • Denominazione della macchina • tekstin naskukuma • Mašinos pavadinimas • Isem tal-Magna • Nazwa urządzenia • Nome da Máquina • Numele echipamentului • Názov stroja • Naziv stroja • Nombre de la</p>	<p align="center">TOURNAMENT ULTRA</p>
<p>Designation • Предназначение • Označenie • Belegnelse • Benaming • Nimeux • Tuupunnikitä • Przywołanie • Bezeichnung • Χαρακτηρισμός • Megnevezés • Funzione • Aprindējums • Lituanizacija • Denominazzjoni • Označenie • Specificație • Označenie</p>	<p align="center">GREENS ROLLER</p>
<p>Serial Number • Сериал номер • Sériové číslo • Seriennummer • Seriennummer • Seriennummer • Valmistusnumero • Numéro de série • Βαθμολογισμός • Σειριακός αριθμός • Sorozatszám • Número di serie • Srijas numurs • Srijas numērs • Número Srijati • Numer serijny • Engina • Двигател • Motor • Motor • Motor • Motor • Moolton • Moteur • Motor • Motor • Modulney • Moteiro • Džirje • Vankla • Saħha</p>	<p align="center">T3631</p>
<p>Net Installed Power • Нета инсталирана мощност • Čistý nainštalovaný výkon • Installatnettoeffekt • Netto gunstlesteort vermogen • Netto installert nettovirkning • Αερισμένο καθαρό • Puissance nominale nette • installierte Nettoleistung • καθαρή εγκατεστημένη ισχύς • Netto elektrisk teleffekt • Potenza netta installata • Paredāta tīra jauda • Dzinēja gaia • Włał tal-Qiegħ • Moc zainstalowana netto</p>	<p align="center">12 kW @ 1500 RPM</p>
<p>Conforms to Directives • В съответствие с директивите • Spĺňuje podminky směrnic • Er i overensstemmelse med direktiver • Voldoet aan de richtlijnen • Vastav direktivide • Direktiivien mukainen • Conforme aux directives • Entspricht Richtlinien • Ακολουθεί τις Οδηγίες • Magħlefi tal-irregulazzjonijiet • Conforme alle Direttive • Atbilst direktīvām • Atbilsta direktīvu iekārtājumus • Valtaozzjoni tal-Konformità • Dyrektywy związane • Cumpre as Directivas • Respektā Direktīvas • Je v súlade so smernicami • Skladnost z direktivami</p>	<p align="center">2006/42/EC; 2000/14/EC Annex VI, Part I</p>
<p>Conformity Assessment • Оценка за съответствие • Hodnocení plnění podmínek • Överensstemmelsevärdering • Conformiteitsbeoordeling • Vastavushindamine • Vaatimustenmukaisuuden arviointi • Evaluation de conformité • Konformitätsbeurteilung • Διαπιστώση Συμμόρφωσης • Magħlefiel-ġeg-irtokleas • Valutazione della conformità • Atbilstības novērtējums • Atitiktības vertinimas • Level tal-Gawwa tal-Mosa Imkegħat • Ocena zgodności • Avaliação de Conformidade • Evaluarea conformității • Vyhodnotanie zhodnosti • Ocena</p>	<p align="center">2006/42/EC Annex VIII</p>
<p>Measured Sound Power Level • Измерено ниво на звукова мощност • Měřený akustický výkon • Mito lydstrykeniveau • Gemeten geluidvermogen • Mõõdetud helivõimsus • Määratud ääniteho • Niveau de puissance sonore mesuré • Gemesener Schalldruckpegel • Σταθμισμένο επίπεδο ηχητικής ισχύος • Měřt hangteljesítményszint • Livello di potenza sonora misurato • Izvērtais skaņas jaudas līmenis • Izmērītais skaņas jaudas līmenis • Level tal-Gawwa tal-Mosa Iggarantij • Moc akustyczna mierzona • Nivel sonore măsurat • Nivelul măsurat al puterii acustice • Namerana hradina akustičkeho výkonu • Izvērtāta raven zvāne mōči • Nivel de putinca sonora mēdida • Uppmätt</p>	<p align="center">72 dB(A)1w</p>
<p>Guaranteed Sound Power Level • Гарантирано ниво на звукова мощност • Garantovaný akustický výkon • Garantierat lydstrykeniveau • Gwarantiered geluidvermogen • Garantētais helivõimsus • Garantētais ääniteho • Niveau de puissance sonore garanti • Garantierter Schalldruckpegel • Εγγυημένο επίπεδο ηχητικής ισχύος • Szavatolt hangteljesítményszint • Livello di potenza sonora garantito • Gadsātais skaņas jaudas līmenis • Garantuotais skaņas stiprums • Level tal-Gawwa tal-Mosa Iggarantij • Moc akustyczna gwarantowana • Nivel sonore garantat • Nivelul garantat al puterii acustice • Garantovaná hradina akustičkeho výkonu • Zāģināta raven zvāne mōči • Nivel de putinca sonora garantat • Gwarantert</p>	<p align="center">75 dB(A)1w</p>
<p>Conformity Assessment Procedure (Noise) • Оценка за съответствие на процедурата (Шум) • Postup hodnocení plnění podmínek (hluk) • Procedure for overensstemmelsevurdering (Støj) • Procedura van de conformiteitsbeoordeling (geluid) • Vastavushindamismenetlus (mürä) • Vaatimustenmukaisuuden arvioinninmenettely (Melu) • Procedure d'évaluation de conformité (bruit) • Konformitätsbeurteilungsv erfahren (Geräusch) • Διαδικασία Αξιολόγησης Συμμόρφωσης (Θόρυβος) • Megfelelősség-értékelési eljárás (Zaj) • Procedura di valutazione della conformità (rumore) • Atbilstības novērtējuma procedūra (troksnis) • Atitiktības vertinimo procedūra (garsas) • Procedura (pl-Valutazzjoni tal-Konformità (fisz) • Procedura oceny zgodności (poziom hałas) • Procedura de evaluare de conformitate (zgomot) • Postup vyhodnocovávania zhodnosti (hluk) • Postup za ugotavljanje skladnosti (hrup) • Procedimiento de evaluación de conformidad (ruido) • Procedura för bedömning av överensstemmelse (buller)</p>	<p align="center">2000/14/EC Annex VI Part I</p>

<p>UK Notified Body for 2000/14/EC - Нотифициран орган в Обединеното кралство за 2000/14/ЕО - Úřad certifikovaný podle směrnice č. 2000/14/EC - Det britiske bemyndigede organ for 2001/14/EF - Engels adviesorgaan voor 2000/14/EG - Uhendkundngagi teavitatud asutus direktiivi 2000/14/EÜ mõistes - Direktiivi 2000/14/EY mukainen ilmoitettu tarkastuslaitos - Ispaña - Britanniassa - Organismo notifié concernant le directive 2000/14/CE - Britische benannte Stelle für 2000/14/EG - Κοινοποιημένος Οργανισμός Ηνωμένων Βασιλείων για 2000/14/ΕΚ - 2000/14/ΕΚ - egyesült királyságbeli bejelentett szervezet - Organismo Notificato in GB per 2000/14/CE - 2000/14/ΕΚ AK regisztrált szervezet - JK notifikulosios įstaigos 2000/14/EC - Korp Notifikat tar-Renju Unit ghal 2000/14/KE - Dopuszczona jednostka badawcza w Wielkiej Brytanii wg 2000/14/WE - Entidade notificada no Reino Unido para 2000/14/CE - Organism notified in Marra Britanie pentru 2000/14/CE - Notifikovaný orgán Spojeného královstva pre smernicu 2000/14/ES - Britanski priglašeni organ za 2000/14/ES - Cierpo notificado en el Reino Unido para 2000/14/CE - Annält organ för 2000/14/EG i Storbritannien</p>	<p>Smithco / Humboldt 1020 Hwy 224 Humboldt Ks 66748 USA</p>
<p>Operator Ear Noise Level - Оператор на нивото на доловим от ухото шум - Hladina hluku v oblasti uši operátora - Støjriveau i førers ører - Niveau de bruit à hauteur des oreilles de l'opérateur - Schallpegel am Bedienerohr - Επίπεδο θορύβου σε Αιτιούργιο - A kezelő felületén mért zajszint - Livellul di potenza sonora all'orecchio dell'operatore - Τρόσσηψη ήμενης πτε οπεράτορα auss - Dřevňočíso ju mašina patřnámu trůksámu lypis - Livellul tal-Ross fil-Widna tal-Operator - Dopuszczalny poziom hałasu dla operatora - Nivel sonor no os ouvidos do operador - Nivelul zgomotului la urechea operatorului - Hladina hluku pšobociaca na sluch operátora - Raven hrupa pri ušesu upravljavca - Nivel sonore en el oido del operador - Livellul ved forørens øra</p>	<p>72 db(A)Lwa (2006/42/EC)</p>
<p>Harmonised standards used - Използвани хармонизирани стандарти - Použité harmonizované normy - Brugte harmoniserede standarder - Gebuikte geharmoniseerde standaards - Kasutatud ühtlustatud standardid - Käytetyt yhdenmukaistetut standardit - Normes harmonisées utilisées - Angewandte harmonisierte Normen - Ενομοποιημένα πρότυπα που χρησιμοποιήθηκαν - Harmonizált szabványok - Standard armonizzati applicati - Izmanjotie saskajotie standardi - Panaudoti sudarinti standartai - Standards armonizzati usati - Normy spójne powiązane - Normas harmonizadas usadas - Standardele armonizate utilizate - Použité harmonizované normy - Uporabljeni usklajeni standardi - Estandares armonizados utilizados - Harmoniserade standarder som används</p>	<p>85 EN ISO 12300-1 85 EN ISO 13857 85 EN 349</p>
<p>Technical standards and specifications used - Използвани технички стандарти и спецификации - Použité technické normy a specifikace - Brugte tekniske standarder og specifikationer - Gebuikte technische standaards en specificaties - Kasutatud tehnilised standardid ja spetsifikatsioonid - Käytetyt tekniset standardit ja eritelmit - Specifications et normes techniques utilisées - Angewandte technische Normen und Spezifikationen - Τεχνικά πρότυπα και προδιαγραφές που χρησιμοποιήθηκαν - Műszaki szabványok és specifikációk - Standard tecnici e specifiche applicati - Izmanjotie tehničke standardi un specificācijas - Panaudoti techniniai standartai ir techninė informacija - Standards u specifikacijonijet tehniči užai - Normy i specyfikacje techniczne powiązane - Normas técnicas e especificações usadas - Standardele tehnice și specificatiile utilizate - Použité technické normy a specifikácie - Uporabljeni tehnični standardi in specifikacije - Estandares y especificaciones técnicas utilizadas - Tehniska standarder och specifikationer som används</p>	<p>85 EN ISO 3549-1 85 EN ISO 3549-2</p>
<p>The place and date of the declaration - Място и дата на декларацията - Misto a datum prohlášení - Sted og dato for erklæringen - Plaats en datum van de verklaring - Deklaratsiooni väljastamise koht ja kuupäev - Vakuutusken paikka ja päivämaa - Lieu et date de la déclaration - Ort und Datum der Erklärung - Τόπος και ημερομηνία δήλωσης - A nyilatkozat kelte (hely és idő) - Luogo e data della dichiarazione - Deklarācijas vieta un datums - Deklarācijas vieta ir data - It-posti u d-data tad-dikjarazzjoni - Miejsce i data wystawienia deklaracji - Local e data da declaração - Locul și data declarației - Miesto a datum vyhlášení - Kraj in datum izjave - Lugar y fecha de la declaración - Plaats en datum for deklarasjon</p>	<p>Smithco / Humboldt 1020 Hwy 224 Humboldt Ks. 66748 USA 3-Dec-09</p>
<p>Signature of the person empowered to draw up the declaration on behalf of the manufacturer, holds the technical documentation and is authorised to compile the technical file, and who is established in the Community. Подпис на човека, упълномощен да състави декларацията от името на производителя, който поддържа техническата документация и е оторизиран да изготви техническия файл и е регистриран в общността. Подпис osoby oprávněné sestavit prohlášení jménem výrobce, držet technickou dokumentaci a osoby oprávněné sestavit technické soubory a založené v rámci Evropského společenství. Underskrift af personen, der har fuldmagt til at udarbejde erklæringen på vegne af producenten, der er indehaver af dokumentationen og er bemyndiget til at udarbejde den tekniske journal, og som er baseret i nærområdet. Handtekening van de persoon die bevoegd is de verklaring namens de fabrikant te tekenen, de technische documentatie bewaart en bevoegd is om het technische bestand samen te stellen, en die is gevestigd in het Westengebied. Ühenduse registre kaudu isku allkirj, kes on volitatud tootja nimel deklaratsiooni koostama, kes omab tehnilisdokumentatsiooni ja keel on õigus koostada tehniline toimik. Sen henkilö allkirjoitus, jolla on valmistajan valtuutus vakuutuksen laadintaan, jolla on hallussaan teknisetasiakirjat, joka on valtuutettu laatimaan tekniset asiakirjat ja joka on sijaitsevan yhteisöön. Signature de la personne habilitée à rédiger la déclaration au nom du fabricant, à détenir la documentation technique, à compiler les fichiers techniques et qui est implantée dans la Communauté. Unterschrift der Person, die berechtigt ist, die Erklärung im Namen des Herstellers abzugeben, die die technischen Unterlagen aufbewahrt und berechtigt ist, die technischen Unterlagen zusammenzustellen, und die in der Gemeinschaft niedergelassen ist. Υπογραφή ατόμου εξουσιοδοτημένου για την σύνταξη της δήλωσης εκ μέρους του κατασκευαστή, ο οποίος κατέχει την τεχνική έκδοση και έχει την εξουσιοδότηση να ταξινομήσει τον τεχνικό φάκελο και ο οποίος ενδιόρισμένος στην Κοινότητα. A gyártó műszaki fájl összeállításához, és aki a közösségen belülről eredett személy. Firma della persona autorizzata a redigere la dichiarazione a nome del fabbricante, in possesso delladocumentazione tecnica ed autorizzata a costituire il fascicolo tecnico, che deve essere stabilita nella Comunità. Tās personas paraksts, kura ir pilnvarota deklarācijas sastādīšanai ražotāja vārdā, kurai ir tehniskā dokumentācija, kura ir pilnvarota sagatavot tehnisko reģistru un kura ir apstiprināta Kopienā. Asmuo, kuris yra gana žinomas, kuriam gamintojas suteikė įgaliojimus sudaryti šią deklaraciją, ir kuris įpaširasė, turi visą techninę informaciją ir yra įgaliotas sudaryti techninės informacijos dokumentą. Ifirma autorizzata a redigere la dichiarazione a nome del fabbricante, in possesso della documentazione tecnica ed autorizzata a costituire il fascicolo tecnico, che deve essere stabilita nella Comunità. Podpis osoby upowaznionej do sporządzenia deklaracji w imieniu producenta, przechowującej dokumentację techniczną, upowazniona do stworzenia dokumentacji technicznej oraz wyznaczonej ds. wspólnotowych. Assinatura da pessoa com poderes para emitir a declaração em nome do fabricante, que possui a documentação técnica, que está autorizada a compilar o processo técnico e que está estabelecida na Comunidade. Semnătura persoanei împuternicite să elaboreze declarația în numele producătorului, care deține documentația tehnică, este autorizată să compileze dosarul tehnic și este stabilită în Comunitate. Podpis osoby poverenej vystaveniu vyhlášení v mene výrobce, ktorá má technickú dokumentáciu a je oprávnená spracovať technické podklady a ktorá je umiestnená v Spoločenstve. Podpis osebe, pooblašene za izdelavo izjave v imenu proizvajalca, ki ima tehnično dokumentacijo in imena v imenu proizvajalca, ki ima sedež v Skupnosti. Firma de la persona responsabile de la declaración en nombre del fabricante, que posee la documentación técnica y esta autorizada para recopilar el archivo técnico y que está establecido en la Comunidad. Undertecknas av den som bemyndigad att upprätta deklarationen å tillverkarens vägnar. Innehar den tekniskadokumentationen och har behörighet att upprätta deklarationen på tillverkarens vägnar. </p>	<p>2004/42/EC/Annex II 1A:2 Tim Lansdell Technical Director 19th March 2009 Ransomes Jacobsen Limited West Road Ransomes Europark, Ipswich England, IP3 9TT</p> <p>2006/42/EC Annex II 1A:10 Larry Johnson Technical Director Smithco Inc. 34 West Avenue Wayne, PA 19087-3311 10-Dec-09</p>
<p>Certificate Number - Номер на сертификата - Číslo osvědčení - Certifikatnummer - Certificate number - Sertifiikaadi number - Hyväksyntänumero - Número de certificat - Bescheinigungsnummer - Αριθμός Πιστοποιητικού - Hitelesítési szám - Numero del certificato - Sertifikata numars - Sertifikato numeris - Numru laç-Certifikat - Numer certyfikatu - Numero do Certificado - Număr certifiat - Číslo osvědčenia - Štavilka certifikata - Número de certificado - Certifikatsnummer</p>	<p>75402009</p>

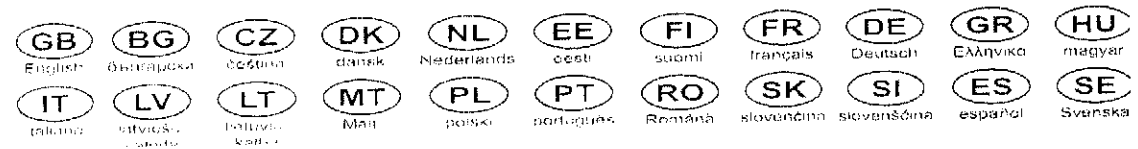

The Smithco Commercial Products Two-Year Limited Warranty

Smithco, Inc. (Smithco) warrants your 2007 or newer Smithco Commercial Product ("Product") purchased after January 1, 2007, to be free from defects in materials or workmanship for the period of time listed below. Where a warrantable condition exists, Smithco will repair the Product at no cost to you including diagnosis, labor (at the Smithco standard labor rate, subject to the Smithco flat rate schedule), and parts.

Warranty Duration Is:

1. Two years, 1500 operational hours* from the date of delivery to the original purchaser or three years from the date of original manufacturer of the product, whichever occurs first. (*Products equipped with hour meter).
2. Products used in rental situations are covered for 90 days from date of delivery to original user/renter.

Owner responsibilities:

As the Product owner, you are responsible for required maintenance and adjustments stated in your Owner's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim. **You are particularly responsible to train all present and future operators of this product on the safe operation of this product at your location.**

Instructions for Obtaining Warranty Service:

You are responsible for notifying the Authorized Smithco Products Distributor from whom you purchased the Product as soon as you believe a warrantable condition exists and not later than 30 days from discovery of the condition.

If you need help locating an Authorized Smithco Distributor, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Smithco Product Support Department
Highway 55 @ Poplar St.
Cameron, Wisconsin 54822
Telephone: 715-458-4192 E-Mail: ProductSupport@Smithco.com

Maintenance Parts:

Parts scheduled for replacement as required maintenance ("Maintenance Parts"), are warranted for the period of time up to the scheduled replacement time for that part.

Items/Conditions Not Covered:

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. The items/conditions listed below are not covered by this warranty.



Product failures which result from the use of non-Smithco replacement parts, or from installation and use of add-on, modified, or unapproved accessories are not covered.



Product failures which result from failure to perform required maintenance and/or adjustments are not covered.



Product failures that result from operating the Product in an abusive, negligent or reckless manner are not covered.



This warranty does not apply to parts subject to consumption through use, unless found to be defective. Examples of parts which are consumed, or used up during normal Product operation include, but are not limited to: blades, tines, teeth, scarifiers, rakes, plates, wear plates, castor wheels, tires, batteries, filters, belts, nozzles, etc.



This warranty does not apply to failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, or chemicals, etc.



This warranty does not apply to normal "wear and tear" items. Normal "Wear and Tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.



Smithco may require the return of failed parts or components in order determine the validity of any warranty claim.



Smithco will not be obligated to replace components of other manufacturers if inspection by the original component manufacturer indicates that failure was due to normal wear and tear, expected consumption through use or improper care or service.

Other Legal Disclaimers:

The above remedy for product defects through repair or replacement by an authorized Smithco distributor or dealer is the purchaser's sole remedy for any defect. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

THERE ARE NO OTHER EXPRESS WARRANTIES OTHER THAN THOSE SET FORTH ABOVE. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTIES CONTAINED HEREIN.

Some States may not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

THE SMITHCO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT, INCLUDING ANY COST OR EXPENSE OF PROVIDING A SUBSTITUTE PRODUCT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states may not allow the exclusion of indirect, incidental or consequential damages, so the above exclusion may not apply to you.

Smithco neither assumes, nor authorizes any person to assume for it, any other liability in connection with the sale or use of this product.

**SMITHCO, INC.
WAYNE, PA 19087**

