

Sport truck
52-000-A

December 2008

CONTENTS

Introduction

Service

Diagrams

Introduction	1-13
Introduction	1
Symbols	2-3
Safe Practices	4
Specifications	5
Optional Equipment	6
Operation	7
Controls & Instruments	8
Maintenance	9-11
Service Charts	12-13
Schematics	14-17
Hydraulic Schematic	14-15
Wiring Schematic	16-17
Reference	18
Decal List	18
Warranty	Inside Back Cover

The Smithco Commercial Products Two-Year Limited Warranty

Smithco, Inc. (Smithco) warrants your 2007 or newer Smithco Commercial Product ("Product") purchased after January 1, 2007, to be free from defects in materials or workmanship for the period of time listed below. Where a warrantable condition exists, Smithco will repair the Product at no cost to you including diagnosis, labor (at the Smithco standard labor rate, subject to the Smithco flat rate schedule), and parts.

Warranty Duration is:

- (1) **Two years, 1500 operational hours* from the date of delivery to the original purchaser or three years from the date of original manufacturer of the product, whichever occurs first. (*Products equipped with hour meter).**

- (2) **Products used in rental situations are covered for 90 days from date of delivery to original user/renter.**

Owner Responsibilities:

As the Product owner, you are responsible for required maintenance and adjustments stated in your Owner's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim. **You are particularly responsible to train all present and future operators of this product on the safe operation of this product at your location.****Instructions for Obtaining Warranty Service:**

You are responsible for notifying the Authorized Smithco Products Distributor from whom you purchased the Product as soon as you believe a warrantable condition exists and not later than 30 days from discovery of the condition.

If you need help locating an Authorized Smithco Distributor, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Smithco Product Support Department
Highway 55 @ Poplar St.
Cameron, Wisconsin 54822

Telephone: 715-458-4192

E-Mail: ProductSupport@Smithco.com

Maintenance Parts:

Parts scheduled for replacement as required maintenance ("Maintenance Parts"), are warranted for the period of time up to the scheduled replacement time for that part. **Items/Conditions Not Covered:**

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. The items/conditions listed below are not covered by this warranty:

[* File contains invalid data | In-line.JPG *] Product failures which result from the use of non-Smithco replacement parts, or from installation and use of add-on, modified, or unapproved accessories are not covered.

Product failures which result from failure to perform required maintenance and/or adjustments are not covered.

Product failures that result from operating the Product in an abusive, negligent or reckless manner are not covered.

This warranty does not apply to parts subject to consumption through use, unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to: blades, tines, teeth, scarifiers, rakes, plates, wear plates, castor wheels, tires, batteries, filters, belts, nozzles, etc.

This warranty does not apply to failures caused by out-side influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, or chemicals, etc.

This warranty does not apply to normal "wear and tear" items. Normal "Wear and Tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Smithco may require the return of failed parts or components in order to determine the validity of any warranty claim.

Smithco will not be obligated to replace components of other manufacturers if inspection by the original component manufacturer indicates that failure was due to normal wear and tear, expected consumption through use or improper care or service.

Other Legal Disclaimers:

The above remedy for product defects through repair or replacement by an authorized Smithco distributor or dealer is the purchaser's sole remedy for any defect. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

THERE ARE NO OTHER EXPRESS WARRANTIES OTHER THAN THOSE SET FORTH ABOVE. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTIES CONTAINED HEREIN.

Some states may not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

THE SMITHCO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT, INCLUDING ANY COST OR EXPENSE OF PROVIDING A SUBSTITUTE PRODUCT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states may not allow the exclusion of indirect, incidental or consequential damages, so the above exclusion may not apply to you.

Smithco neither assumes, nor authorizes any person to assume for it, any other liability in connection with the sale or use of this product.

SMITHCO, INC.

Wayne, PA 19087



Thank you for purchasing a **Smithco** product.


Read this manual and all other manuals pertaining to this Sport Truck carefully as they have safety, operating, assembly and maintenance instructions. Failure to do so could result in personal injury or equipment damage.

Keep manuals in a safe place after operator and maintenance personnel have read them. Right and left sides are from the operator's seat, facing forward.

All **Smithco** machines have a Serial Number and Model Number. Both numbers are needed when ordering parts. The serial number plate on the Sport Truck is located on the right front main frame. Refer to engine manual for placement of engine serial number.

For easy access record your Serial and Model numbers here.


SMITHCO WAYNE, PENNSYLVANIA 19087 USA 610-688-4009 Fax 610-688-6069		DATE OF MFG. <input type="text"/>
SERIAL NO. <input type="text"/>	kW/hp <input type="text"/>	
MODEL NO. <input type="text"/>	kg/lb <input type="text"/>	

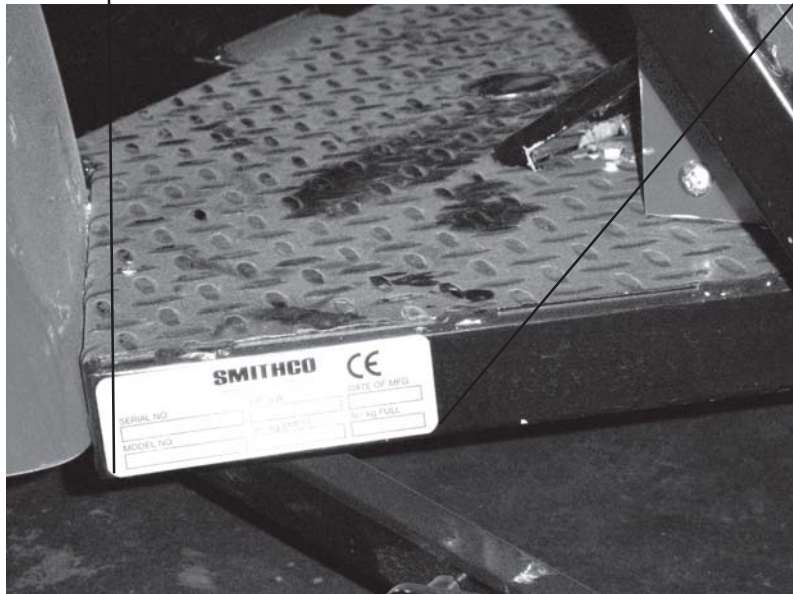

Information needed when ordering replacement parts:

1. Model Number of machine
2. Serial Number of machine
3. Name and Part Number of part
4. Quantity of parts

 SYMBOLS



Read Operator's Manual



Electrical Power



No Electrical Power




Engine - Stop



Engine - Start




Engine - Run

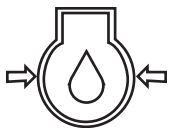


Engine Oil




Temperature Light

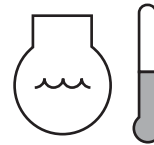

Water Temperature

 

RPM

 

Gasoline



Diesel



Glow Plug - On




Glow Plug - Off




Glow Plug



Hour Meter

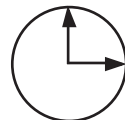

Hour Meter

 

Fuse



Hand Throttle



Choke - Closed



 
Choke - Open











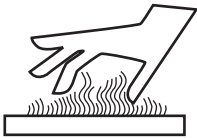
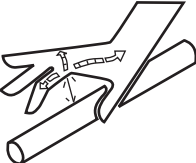
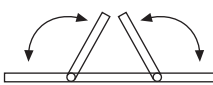
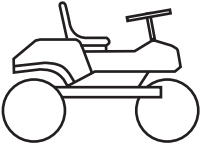



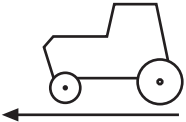



Park Brake

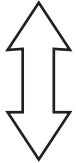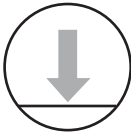

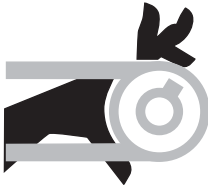Park Brake Release



Hydraulic Oil Level

	Up/Down Arrow		Down/Lower		Up/Raise
	No Smoking		Moving Parts		Manual Operation
	Pinch Point		Step		Hot Surface
	Hydraulic Fluid Penetration		Lift Arm		Tractor
	Engage		Disengage		PTO
	Ground Speed		Fast		Slow
H	High	L	Low	F	Forward
R	Reverse	N	Neutral		Warning Danger Caution

SAFE PRACTICES

1. It is your responsibility to read this manual and all publications associated with this machine (engine, accessories and attachments).
2. Never allow anyone to operate or service the machine or its attachments without proper training and instructions. Never allow minors to operate any equipment.
3. Learn the proper use of the machine, the location and purpose of all the controls and gauges before you operate the equipment. Working with unfamiliar equipment can lead to accidents.
4. Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands and feet. Operate the machine only in daylight or in good artificial light.
5. Beware of overhead obstructions and underground obstacles. Stay alert for hidden hazards.
6. Never operate equipment that is not in perfect working order or without decals, guards, shields, or other protective devices in place.
7. Never disconnect or bypass any switch.
8. Carbon monoxide in the exhaust fumes can be fatal when inhaled, never operate a machine without proper ventilation.
9. Fuel is highly flammable, handle with care.
10. Keep engine clean. Allow the engine to cool before storing and always remove the ignition key.
11. After engine has started, machine must not move. If movement is evident, the neutral mechanism is not adjusted correctly. Shut engine off and readjust so the machine does not move when in neutral position.
13. Never use your hands to search for oil leaks. Hydraulic fluid under pressure can penetrate the skin and cause serious injury.
14. This machine demands your attention. To prevent loss of control or tipping of the vehicle:
 - A. Use extra caution in backing up the vehicle. Ensure area is clear.
 - B. Do not stop or start suddenly on any slope.
 - C. Reduce speed on slopes and in sharp turns. Use caution when changing directions on slopes.
 - D. Stay alert for holes in the terrain and other hidden hazards.
15. Before leaving operator's position for any reason:
 - A. Disengage all drives.
 - B. Lower all attachments to the ground.
 - C. Set park brake.
 - D. Shut engine off and remove the ignition key.
16. Keep hands, feet and clothing away from moving parts. Wait for all movement to stop before you clean, adjust or service the machine.
17. Keep the area of operation clear of all bystanders.
18. Never carry passengers.
19. Stop engine before making repairs/adjustments or checking/adding oil to the crankcase.
20. Use parts and materials supplied by **Smithco** only. Do not modify any function or part.



WEIGHTS AND DIMENSIONS

Length	97" (246cm)
Width	58" (147 cm)
Height	73" (185 cm)
Wheel Base	55" (140 cm)
Ground Clearance	6" (15 cm)
Capacity (with cargo box)	1200 lbs (544 kg) includes operator
Crated Weight	1350 lbs (612 kg)
Towing Capacity	1500lbs (680 kg)

SOUND LEVEL (DBA) AT 3200 RPM

At ear level	90 dba
At 3 ft (0.914 m)	90 dba
At 30 ft (9.14 m)	81 dba

ENGINE

Make	Briggs and Stratton vanguard
Model#	303447
Type/Spec#	131E1
Horsepower	16 Hp (12 Kw)
Fuel	Unleaded 87 Octane Gasoline Minimum
Cooling System	Air Cooled
Lubrication System	Full Pressure type
Alternator	16 AMP

WHEELS & TIRE

(2) Front	W/20 x 10.00 x 10 Turf; 5 psi (.35 bar)
(2) Rear	22 x 11.00 x 10 Turf; 20 psi (1.4 bar)

VEHICLE CONFIGURATION

Cab over single seat

CONSTRUCTION

All steel, welded chassis, cargo box and frame, FRP body

DRIVE AXLES

Spicer Dana automotive, 1200 pound capacity

SPEED

Forward Speed	0-12 mph (0- 19 kph)
Reverse Speed	0-12mph (0-19 kph)

STEERING

Hydraulic Power Steering

BATTERY

Automotive type 45-12 volt

BCI Group	Size 45
Cold Cranking Amps	300
Ground Terminal Polarity	Negative (-)
Maximum Length	9" (23cm)
Maximum Width	5.38" (14cm)
Maximum Height	9" (23cm)

SEAT

Adjustable position deluxe seat with back support

FLUID CAPACITY

Crankcase Oil	3 pints (1.5 liters)
Fuel	32 pints (15 liters)
Hydraulic Fluid	8 pints (3.8 liters)
Grade of Fluid	SAE 10W-40 API Service SJ Motor Oil
ATF	22 pints (10 liters)



OPTIONAL EQUIPMENT

REAR MOUNTED GROOMING IMPLEMENTS

26-007Q	Professional Infield Finisher
52-012	Flex Action Infield Finisher - Leveler
52-008	Rear Leveling/Finishing Implement w/Brush

CENTER MOUNTED SCARIFYING IMPLEMENTS

52-006	Center mounted Spring tine Scarifier w/gage Wheels
52-010	Center Mounted Straight Blade Scarifier w/gage Wheels

FRONT MOUNTED IMPLEMENTS

52-005	60" Front mounted (Manual Operation) Plow
--------	---


CHASSIS MOUNTED OPTIONS & ACCESSORIES

52-007	Dust Suppression System w/ baseball Base Rack
52-009	Spray Liner System
52-011	Dry Line Marker

STARTING ENGINE

Before operating this machine, become familiar with all controls and functions of these units. Also complete all maintenance requirements and read all safety warnings. By knowing the machine thoroughly, how it operates and by doing the prescribed maintenance steps, you can expect relatively trouble-free operation for years to come.

1. Make sure the fuel flow valve, located on the fuel tank, is open.
2. Set park brake.
3. The ignition switch is located on the dashboard. Insert key (A) and turn clockwise until engine starts (C). Release key and it will return to run position (B). Use choke as necessary.
4. Allow engine to idle and warm up a few minutes before selecting a direction of travel.

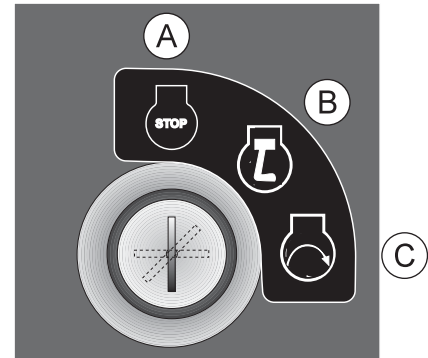**PARKING BRAKE**

The park brake is beside the drivers seat. This brake should be set at all times when the unit is not in operation. To set, push the handle forward. To release the park brake, pull the handle back. Major adjustments should be made by working with the yokes on each end of the brake cable.

STEERING

It is important to familiarize yourself with the steering of the Sport Truck. The steering is power assisted by a pump located on the steering column. This feeds a hydraulic cylinder which pivots the Sport Truck on the center swivel yoke. It will only go as far as the stop allows.


HEADLIGHTS (OPTIONAL)

The Sport Truck is wired for 2 headlights to be mounted on the Roll bar.


FOOT PEDALS

The accelerator pedal (D) is the furthest to the right. This pedal controls ground speed. Press pedal to increase engine RPM, varying the amount of movement of the pedal will vary the ground speed.


The brake (E) is the second pedal on the right. Operates the hydraulic brakes on rear wheels.

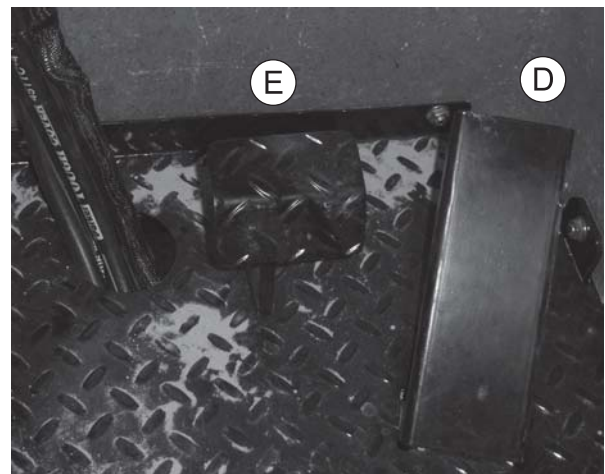

CONTROLS AND INSTRUMENTS

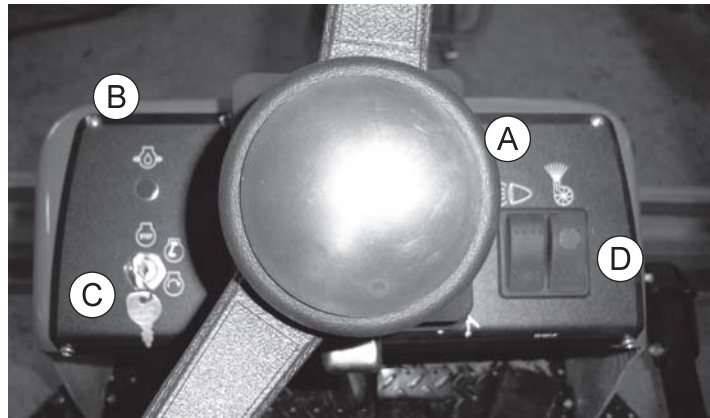

- A. **Light Switch** - This rocker switch will operate lights (optional)
- B. **Oil Light** - The oil light should come on when ignition is on without engine running. The oil light will light when the oil pressure is low. If oil light should come on, shut off engine immediately and find the cause.
- C. **Ignition Switch** - The ignition switch has three positions: Off - Run - Start.
- D. **Spray Pump** - This rocker switch turns the spray pump on by pushing on the top and turns it off by pushing on the bottom.
- E. **Hour Meter/Voltmeter** - The hour meter indicates hours of machine operation. The hour meter operates when ignition switch is on. The voltmeter indicates the rate of charging and discharging of the battery.
- F. **Center Attachment Valve** - Lifts and Lowers the center attachments.
- G. **Rear Attachment Valve** - Lifts and lowers rear attachments.
- H. **Choke** - Close choke plate when starting a cold engine. A warm engine may not require "choking" to start.
- I. **Park Brake** - To set park brake, push the handle forward. To release the park brake, pull the handle back.
- J. **Shift Lever:** Gear selection F-N-R, with the shift pattern on the control panel.

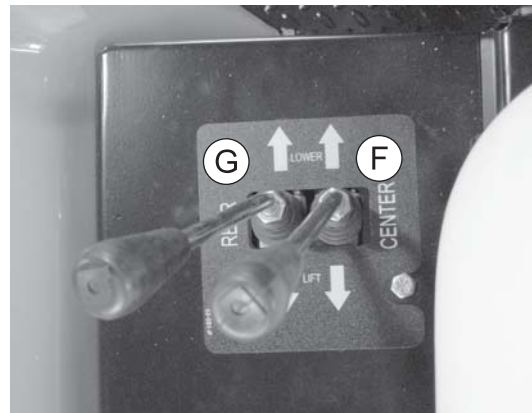



CAUTION

Before servicing or making adjustments to machine, stop engine and remove key from ignition.

NOTE:

Use all procedures and parts prescribed by the manufacturer's. Read the engine manual before operation.

The suggested maintenance checklist is not offered as a replacement for the manufacturer's but as a supplement. You must adhere to guidelines established by manufacturer for warranty coverage. In adverse conditions such as dirt, mud or extreme temperatures, maintenance should be more frequent.

DAILY CHECKLIST

1. Check park brake adjustment. Adjust as required.
2. Check engine oil level. Add as needed. **DO NOT OVERFILL.**
3. Tire pressure should be: front 5 psi (.35 bar) and rear 20 psi (1.36 bar) maximum.
4. Inspect electrical system for loose connections or frayed wiring, including battery cables. Replace any faulty equipment or tighten if loose.
5. Check hardware for loose or missing nuts, bolts, screws, etc., and tighten or replace as needed.
6. Inspect hydraulic lines for damage or leaks. Never use hands to inspect leaks.
7. Check hydraulic oil level in right side tank. The level should be 2" to 2¹/₂" from top of fill neck when fluid is cold. If level is low, add SAE 10W-40 API Service SG motor oil.
8. Inspect steering, throttle and shift linkages for good hookups and clear travel.
9. Check controls for smooth, proper working operation. Lubricate as needed.

LUBRICATION

Use No. 2 General purpose Lithium Base Grease and lubricate every 100 hours. The Sport Truck has three grease fittings. One on each of the right and left front spindles and one on the front axle.

AIR CLEANER ON ENGINE

1. Unhook clips on both sides of cover and remove cover.
2. Carefully slide pre-cleaner off cartridge.
To service pre-cleaner, wash in liquid detergent and water. Squeeze dry in a clean cloth. Saturate in engine oil. Squeeze in clean, absorbent cloth to remove all excess oil. Replace if very dirty or damaged.
3. Remove knob and plate. Carefully remove cartridge to prevent debris from entering carburetor. To service cartridge, clean by tapping gently on flat surface. Do not oil cartridge. Replace if very dirty or damaged.

NOTE:

Do not use petroleum solvents, eg., kerosene, which will cause cartridge to deteriorate. Do not use pressurized air to clean cartridge. Pressurized air can damage cartridge.

4. Reinstall cartridge, plate and knob.
5. Reassemble pre-cleaner on cartridge.
6. Replace cover and reattach clips to body.

AIR CLEANER ON FENDER

1. Remove end cap and filter element, clean by tapping gently on flat surface. Do not oil cartridge. Replace if very dirty or damaged.
2. Remove air cleaner cap and clean. Cap can be washed in solvent, make sure its dry before reinstalling.




MAINTENANCE

TIRE PRESSURE

Caution must be used when inflating a low tire to recommended pressure. Over inflating can cause tires to explode. Tires should be front 5 psi (.35 bar) and rear 20 psi (1.36 bar) maximum. Improper inflation will reduce tire life considerably.

ENGINE OIL

Change and add oil according to chart below. Do not overfill. Use a high quality detergent oil classified "For Service SJ or higher" SAE 30 oil. Use no special additives with recommended oils. Do not mix oil with gasoline.

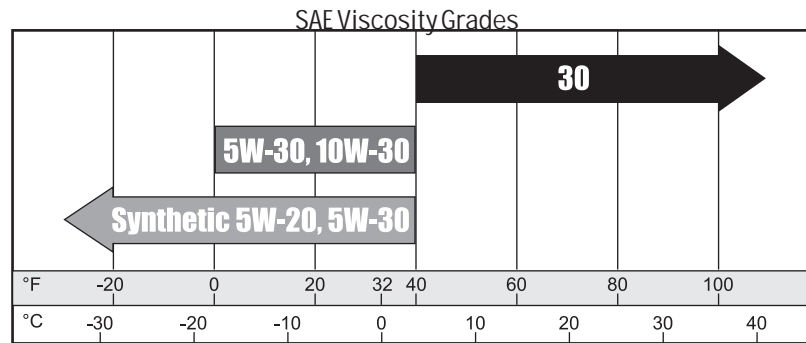

Starting Temperature Range Anticipated Before Next Oil Change

Air cooled engine run hotter than automotive engines. Use of multi-viscosity oils (10W-30, etc) above 40° F (4° C) will result in high oil consumption and possible engine damage. Check oil level more frequently if using these types of oils.

SAE 30 oil, if used below 40° F (4° C), will result in hard starting and possible engine bore damage due to inadequate lubrication.

HYDRAULIC OIL

1. Use SAE 10W-40 API Service SJ or higher motor oil.
2. For proper warranty, change oil every 500 hours or annually, which ever is first.
3. The oil level should be 2" to 2¹/₂" from top of fill neck when fluid is cold. Do not overfill.
4. After changing oil, run the machine for a few minutes. Check oil level and for leaks.
5. Always use caution when filling hydraulic oil tank or checking level to keep system free of contaminants. Check and service more frequently when operating in extremely cold, hot or dusty conditions.
6. If natural color of fluid is now black or smells burnt, it is possible that an overheating problem exists.
7. If fluid becomes milky, water contamination may be a problem.
8. If either of the above conditions happen, change oil and filter immediately after fluid is cool and find cause. Take fluid level readings when system is cold.
9. In extreme temperatures you can use straight weight oil. We recommend SAE 30W API Service SJ or higher when hot (above 90°F (33°C)) and SAE 10W API Service SJ or higher when cold (below 32°F (0°C) ambient temperature. Use either motor oil or hydraulic oil, but do not mix.
10. Oil being added to the system must be the same as what is already in the tank. Mark tank fill area as to which type you put in.

WHEEL MOUNTING PROCEDURE

1. Set park brake. Turn machine off and remove key.
2. Block one of the other wheels.
3. Loosen nuts slightly on wheel to be removed.
4. Jack up machine being careful not to damage underside of machine.
5. Remove nuts, remove Wheel.
5. Place new wheel on hub lining up bolt holes.
6. Torque nuts to 64-74 ft/lb (87-100Nm) using a cross pattern. Retorque after first 10 hours and every 200 hours thereafter.
7. Lower machine to ground and remove blocks and jack.

BATTERY

Batteries normally produce explosive gases which can cause personal injury. Do not allow flames, sparks or any ignited object to come near the battery. When charging or working near battery, always shield your eyes and always provide proper ventilation.

Battery cable should be disconnected before using "Fast Charge".

Charge battery at 15 amps for 10 minutes or 7 amps for 30 minutes. Do not exceed the recommended charging rate. If electrolyte starts boiling over, decrease charging.

Always remove grounded (-) battery clamp first and replace it last. Avoid hazards by:

1. Filling batteries in well-ventilated areas.
2. Wear eye protection and rubber gloves.
3. Avoid breathing fumes when electrolyte is added.
4. Avoid spilling or dripping electrolyte.



Battery Electrolyte is an acidic solution and should be handled with care. If electrolyte is splashed on any part of your body, flush all contact areas immediately with liberal amounts of water. Get medical attention immediately.


JUMP STARTING



Use of booster battery and jumper cables. Particular care should be used when connecting a booster battery. Use proper polarity in order to prevent sparks.

To jump start (negative grounded battery):

1. Shield eyes.
2. Connect ends of one cable to positive (+) terminals of each battery, first (A) then (B).
3. Connect one end of other cable to negative (-) terminal of "good" battery (C).
4. Connect other end of cable (D) to engine block on unit being started (NOT to negative (-) terminal of battery)

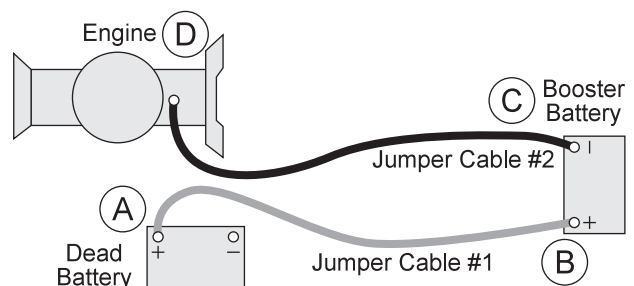

To prevent damage to other electrical components on unit being started, make certain that engine is at idle speed before disconnecting jumper cables.



SERVICE CHART



Before servicing or making adjustments to the machine, stop engine, set park break, block wheels and remove key from ignition.




Follow all procedures and **ONLY** use parts prescribed by the manufacturer. Read the engine manual before maintenance.

The suggested maintenance checklist is not offered as a replacement for the manufacturer's engine manual but as a supplement. You must adhere to the guidelines established by the manufacturer for warranty coverage. In adverse conditions such as dirt, mud or extreme temperatures, maintenance should be more frequent.

Maintenance Service Interval	Maintenance Procedure
After the first 8 operating hours	Torque the wheel lug nuts. (64-74 ft/lb (87-100 Nm))
	Change the engine oil filter.
After the first 20 operating hours	Change oil filter after first 20 and first 100 hours.
Before each use daily	Check the engine oil.
	Check the hydraulic fluid level.
	Check the tire pressure.
	Check condition of hydraulic hoses and fittings.
	Inspect and clean the machine.
	Inspect cooling system.
Every 25 hours	Check the battery fluid level and cable connections.
	Change oil when operating under heavy load or high
Every 50 hours	Change the engine oil and filter.
Every 100 hours	Check engine for leaks or loose parts.
	Check air cleaner.
	Check tire pressure (5 psi (.035 bar) nad 20 psi (1.4 bar)).
	Torque the wheel lug nuts. (64-74 ft/lb (87-100 Nm))
	Grease Machine.
	Check belt tension (where needed)
Every 250 hours	Change oil filter
	Clean battery terminals
Every 400 hours	Check spark plugs
Every 500 hours or yearly	Lubricate machine
	Visual inspection of machine and hydraulic hoses
	Change oil.
	Torque lug nuts.
	Check battery terminals and electrolyte level.
	Change all filters.

HYDRAULIC DIAGRAM

Diagrams

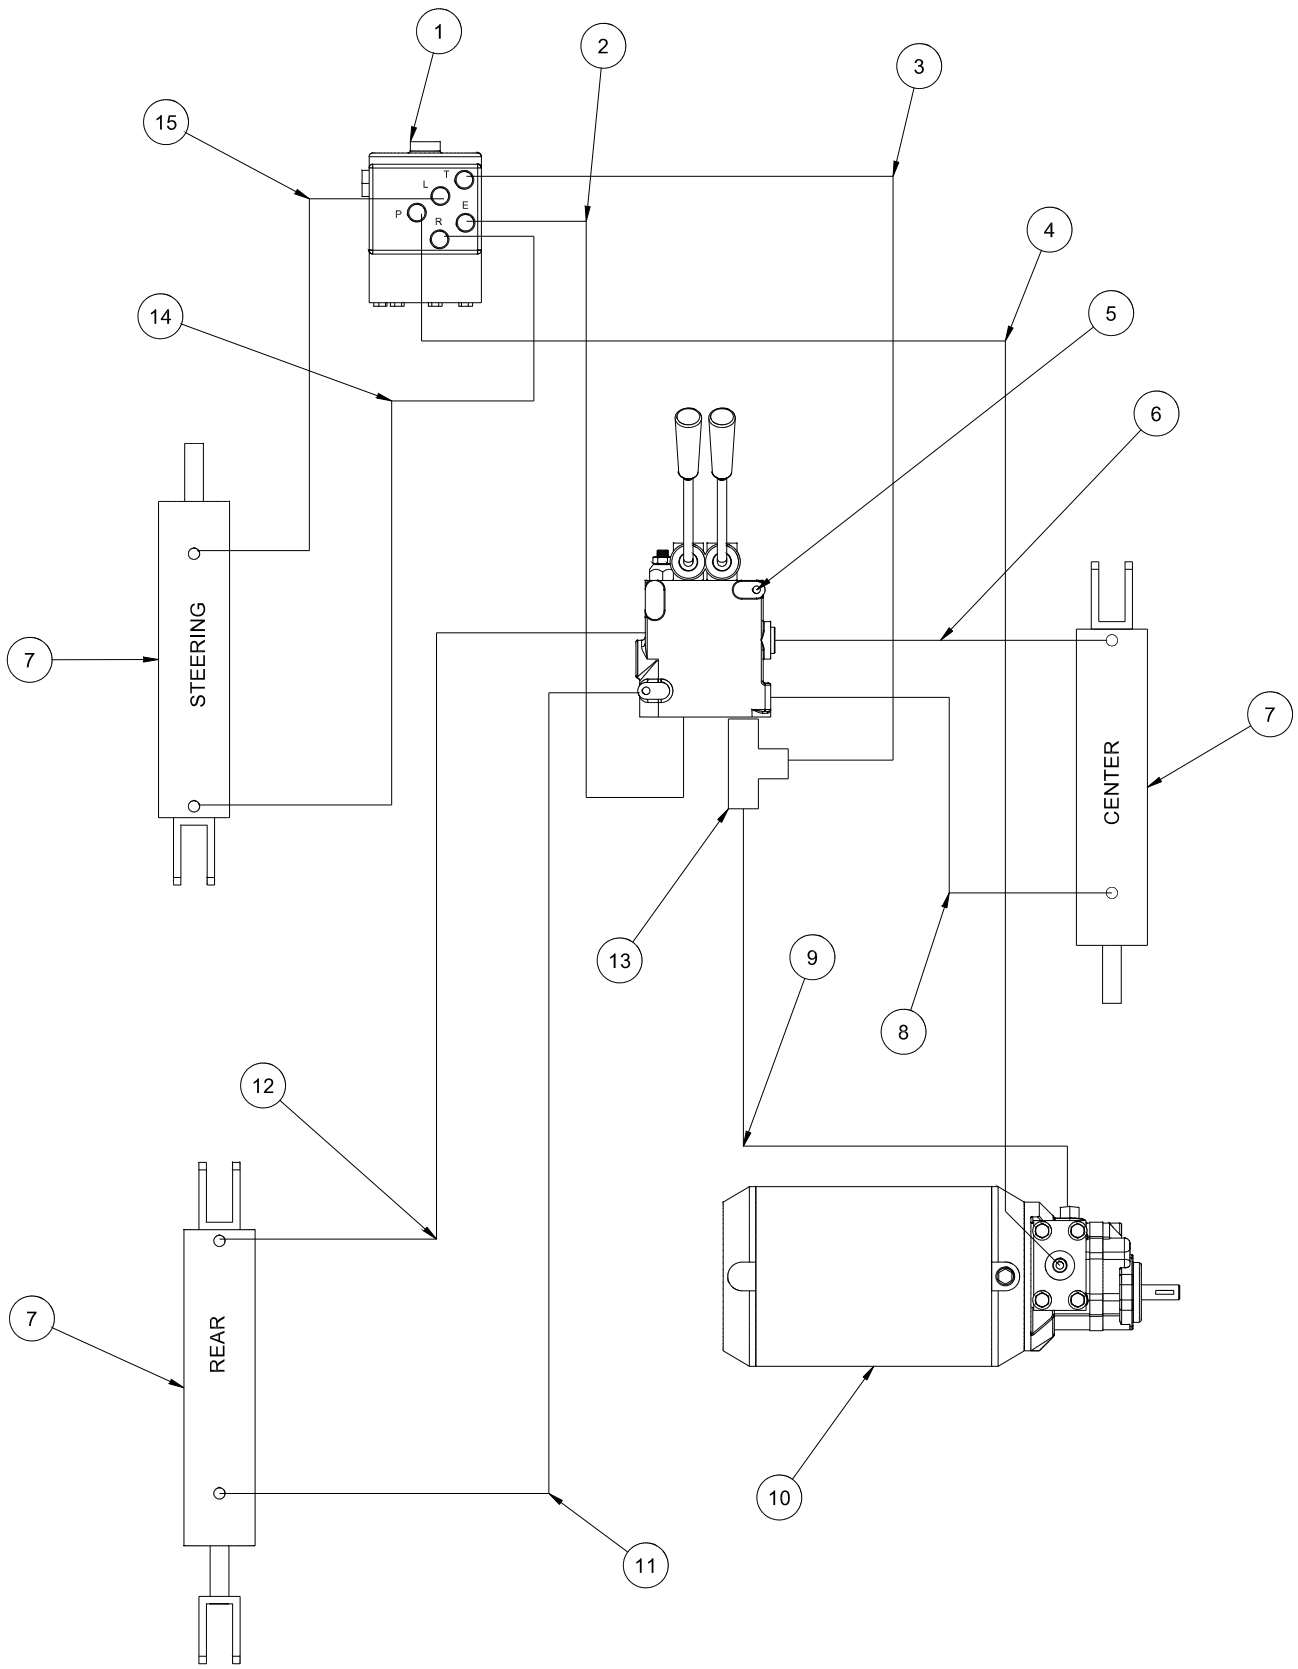


HYDRAULIC DIAGRAM

REF#	PART#	DESCRIPTION	QUANTITY
1	34-103	Orbitrol	1
2	52-067	Hydraulic Hose	1
3	52-068	Hydraulic Hose	1
4	52-061	Hydraulic Hose	1
5	13-729	2-Bank Valve	1
6	52-065	Hydraulic Hose	1
7	75-714	Hydraulic Cylinder	1
8	52-066	Hydraulic Hose	1
9	52-062	Hydraulic Hose	1
10	15-315	Hydraulic Power Unit	1
	15-315-01	Repair Kit	1
11	52-063	Hydraulic Hose	1
12	52-064	Hydraulic Hose	1
13	18-190	Swivel Tee	1
14	52-069	Hydraulic Hose	1
15	52-070	Hydraulic Hose	1



WIRING DIAGRAM

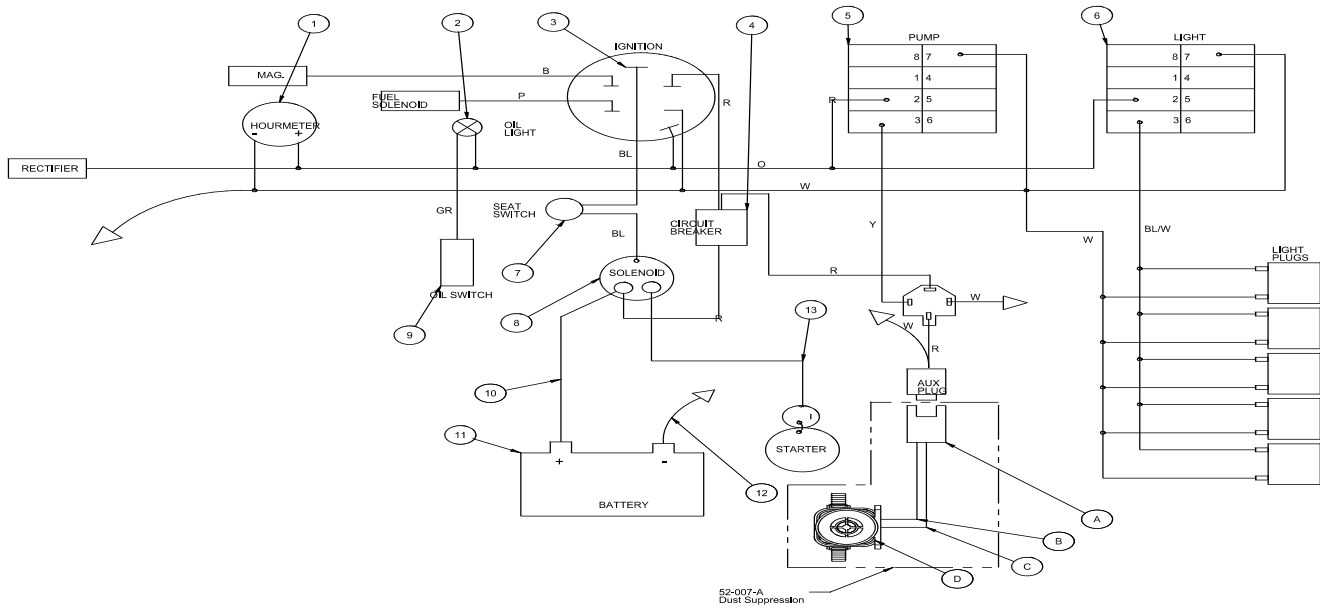

WIRING DIAGRAM

REF#	PART#	DESCRIPTION	QUANTITY
1	12-017	Hourmeter	1
2	50-359	Oil Light	1
3	13-488	Ignition Switch	1
4	8975	Circuit Breaker, 30 Amp	1
	8977	Circuit Breaker Boot. Red	1
5	Light Switch		
	15-725	Panel Mount End	1
	15-727	Switch Actuator, No light	1
	15-782	Rocker Switch Unlit	1
6	Pump Switch		
	15-725	Panel Mount End	1
	15-726	Switch Body, Light	1
	15-731	Actuator, Amber	1
7	14-292	Seat Switch	1
8	13-750	Solenoid w/ Connector	1
9	13-491	Oil Switch	1
10	22-055	Red Battery Cable (positive +)	1
11	22-073	Battery	1
12	48-147	Black Battery Cable (negative -)	1
13	13-197	Starter Cable Black	1
	52-043	Wire Harness	



DECAL LIST

This is a list of decals located on the Sport Truck. Part number, description and location will help in reordering decals.

16-088	Decal, Moving parts	1	Belt Guard
25-277	Decal, battery Warning	1	Left Side Box
25-279	Decal, Safety Warning	1	Right Main Frame
25-286	Decal, Pinch Point	4	Left and Right Console, Left and Right Side Main Frame
25-298	Decal, Warning - Hot	1	Inlet Tube
25-307	Decal, Refuel	1	Left Console
25-354	Decal, Tire 5 PSI	2	Front Tires
25-358	Decal, Smithco	1	Rear tailgate
25-375	Decal, DBA	1	Left Console
27-077	Decal, Smithco Domed	1	Steering Wheel
27-093	Decal, Hydraulic Oil	1	Hydraulic Power Unit
34-147	Decal, Smithco Star	1	Front Nose Cone
52-021	Decal, dashboard	1	Dashboard
52-050	Decal, Console Shift	1	Right Console
52-051	Decal, Console Lift lower	1	Left Console
52-122	Decal Sport Truck	2	Box Sides